Color profile: Disabled
Composite Default screen

CONTENTS OF YOUR OWNER'S MANUAL

CONTENTS

Introduction 1
- Welcome 1
- Features 1
- Included in Your Package 2

Installing and Adjusting Your Phone 3
- Desk/Tabletop Installation 3
- Wall Installation 4
- Installing the Handset Battery Pack 9
- Charging the Battery Pack 10
- Cleaning the Battery Contacts 11
- Setting the Pulse/Tone Switch 11
- Adjusting the Handset Volume Controls 12
- Installing the Beltclip 13
- Headset Installation 14
- Automatic Digital Code Security 14

Using Your New Phone 15
- Making and Receiving Calls 15
- Flash and Call Waiting 15
- Storing a Phone Number in Memory 16
- Editing a Phone Number in Memory 17
- Erasing a Number from Memory 18
- Using Memory Dialing 19
- Traveling Out-of-Range 19
- Using Caller ID 20
- Using Redial 24
- Using the Tone Feature 24
- Using the Page/Intercom Feature 25
- Using the Speaker Phone 25

Setting Up the Integrated Answering Device 26
- The Integrated Answering Device 26
- Features 26
- Turning the Answering System On/Off 27
- Setting the Clock 27
- Setting Your Outgoing Message (OGM) 30
- Selecting the Message Time 31
- Memo 31
- Selecting a Pin Code 32
- Setting the Toll Saver Switch 33
- Using the Reset Button 33

Using the Integrated Answering Device 34
- Playing Your Messages 34
- Repeating a Message 35
- Skipping a Message 36
- Deleting a Message 37
- Recording a Conversation 37
- Remote Access Away from Home 38

Troubleshooting 39
- Quick Reference Chart 39

Specifications 42

C:\Manuals 7\Exs9800\EXS9800.vp
Wed Sep 30 16:32:15 1998

Color profile: Disabled
Composite Default screen

INTRODUCTION TO YOUR NEW PHONE

WELCOME

Congratulations on your purchase of the Uniden EXS9800 cordless telephone. This phone is designed for reliability, long life, and outstanding performance utilizing the latest in 900 MHz Spread Spectrum technology.

FEATURES

- 900 MHz Spread Spectrum Technology
- Integrated Telephone Answering Device (ITAD)
- Caller ID and Call Waiting Caller ID
- 50 Number Caller ID Memory
- 3-Line, 16 Character Backlit LCD Handset Display
- 10 Enhanced Memory Dial Locations
- 32 Digit Redial
- 2nd Battery Capability
- Back-up Power Supply with Optional Battery Pack
- Redial, Flash, and Pause
- Pulse/Tone Dialing
- Page/Intercom
- 7 Day Standby Battery Time
- 4 Hour Talk Time
- Handset Earpiece and Ringer Volume Control
- Hearing Aid Compatible

Digital Spread Spectrum Technology utilizes a “wider frequency band” vs. a “single narrow band” used in standard digital transmissions. The result is a more secure conversation with the clarity of digital sound, extended range, and minimal interference from other cordless phones.

Random Code™ digital security automatically selects one of over 65,000 codes for the handset and base.

These features enhance your phone's security and also prevent unauthorized calls as a result of your phone being activated by other equipment.

C:\Manuals 7\Exs9800\EXS9800.vp
Wed Sep 30 16:32:15 1998

Color profile: Disabled
Composite Default screen

TIP

To get the most from your phone, please read this owner's manual thoroughly. Also be sure to complete and mail the product registration form.

NOTE

If any of these items are missing or damaged, contact the Uniden Parts Department at (800)554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday. We can also be reached on the web at www.uniden.com.

INCLUDED IN YOUR PACKAGE

Handset

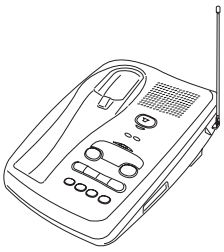
Base

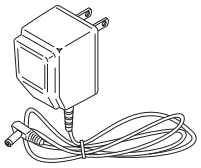
AC Adapter


Rechargeable Battery

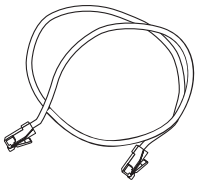
Short Telephone Cord

Beltclip

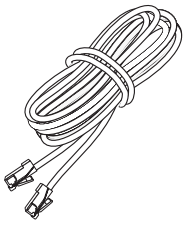
Long Telephone Cord

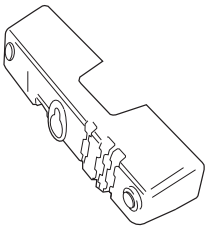
Desktop/ Wall Mount Adapter


Wall Mounting Screws

- This Owner's Manual
- Precautions and Important Safety Instructions
- Registration Card

C:\Manuals 7\Exs9800\EXS9800.vp
Wed Jul 29 13:27:41 1998

Color profile: Disabled
Composite Default screen

TIP

Before choosing a location for your phone, read the "Installation Considerations" included in the "Precautions and Important Safety Instructions" brochure.

DESK/TABLETOP INSTALLATION

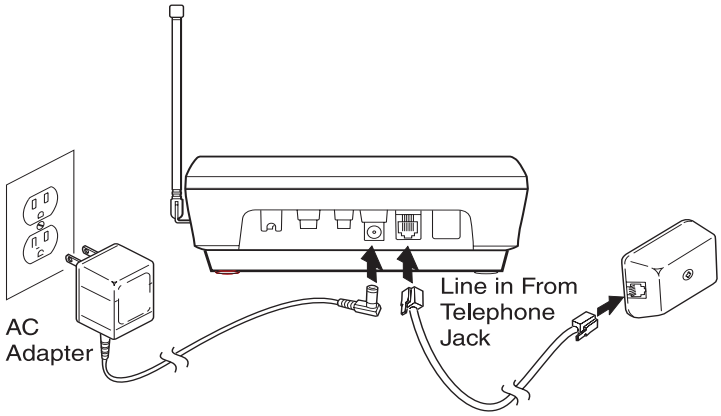

1) Plug the AC adapter cord into the 9 VDC input jack on the back of the base.
2) Wrap the AC adapter cord around the strain relief notch.

Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.

3) Plug the AC adapter into a standard 120 VAC wall outlet.

Use only the Uniden AC adapter supplied with this phone and DO NOT use an outlet controlled by a wall switch.

4) Charge the battery (refer to "Charging the Battery Pack," page 10).
5) Plug one end of the long telephone cord into the **TEL LINE** jack on the back of the base.
6) Plug the other end of the cord into your telephone jack on the wall.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:39:54 1998

Color profile: Disabled
Composite Default screen

HINT

Before using your phone, fully charge the Nickel-Cadmium battery pack for 15-20 hours.

Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.

7) Attach the desktop stand to base

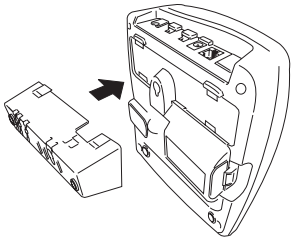

8) Set the base on a desk or tabletop and place the handset into the base. Then, raise the antenna to a vertical position.

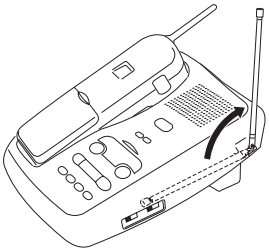

WALL INSTALLATION

▼ *Standard wall plate mounting*

This phone can be mounted on any standard AT&T or GTE wall plate.

1) Remove the mounting adapter from the notches at the top of the base.

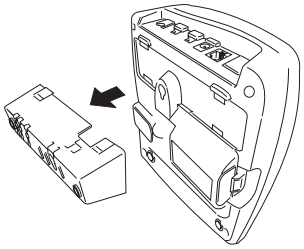

2) Rotate the mounting adapter 180° and snap it into place at the bottom of the base.

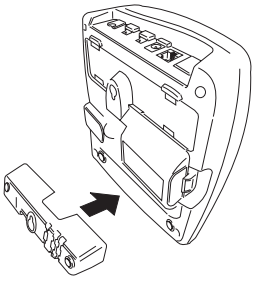

C:\Manuals 7\Exs9800\EXS9800.vp
Tue Oct 06 11:30:27 1998

Color profile: Disabled
Composite Default screen

DO NOT use an outlet controlled by a wall switch.

4) Put the AC adapter cord inside the molded wiring channel, then wrap it around the strain relief notch. Plug the AC adapter into a standard 120 VAC wall outlet.

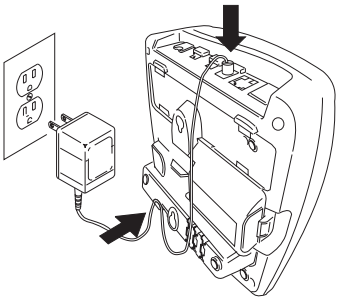

Before you plug the other end of the telephone cord into the modular jack on the wall, charge the battery (refer to "Charging the Battery Pack," page 10).

5) Plug one end of the short telephone cord into the **TEL LINE** jack on the back of the base, then plug the other end into a standard telephone jack.

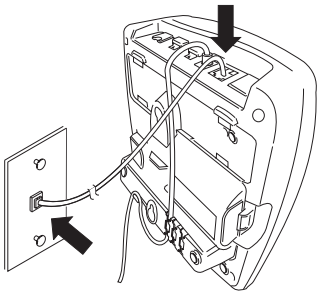

6) Line up the mounting slots on the base with the mounting posts on the wall, then push in and down until the phone is firmly seated.

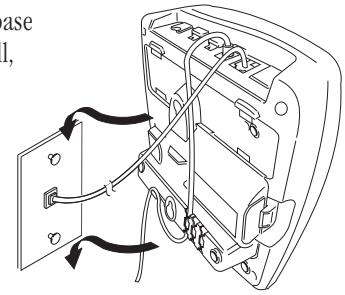

7) On the base unit, pull the handset retainer out of the slot and rotate it clockwise 180°.

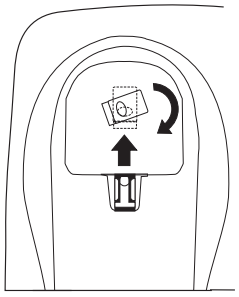

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:40:00 1998

Color profile: Disabled
Composite Default screen

8) Flip the retainer from front to back, then slide it back into the slot so that the lip of the retainer faces up and the oval is at the bottom of the retainer. This will hold the handset in place.

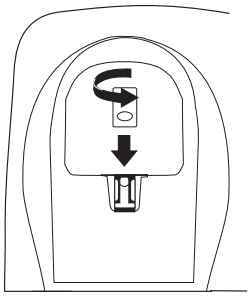

▼ *Direct wall mounting*

If you don't have a standard wall plate, you can mount your phone directly to the wall. Before doing this, consider the following:

- Select a location away from electrical cables, pipes, or other items behind the mounting location. Inserting screws into areas such as this can be hazardous.
- Try to mount your phone within 10 - 15 feet of a working phone jack in order to avoid excessive cord lengths. Remember, you are not mounting to a wall plate with a built in phone jack.
- If the selected mounting area has no wooden support beams directly behind it, you will need the appropriate anchoring devices in order for the wall to properly support your phone.

Be careful not to insert the mounting screws into possible electrical hazards such as cables, wiring, or pipes.

1) Insert two mounting screws into the wall, with their appropriate anchoring device, 3-15/16 inches apart. Allow about 3/16 of an inch between the wall and screw heads for mounting the phone.

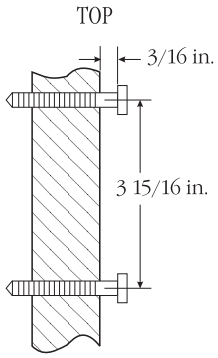

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:40:01 1998

Color profile: Disabled
Composite Default screen

2) Remove the mounting adapter from the notches at the top of the base.

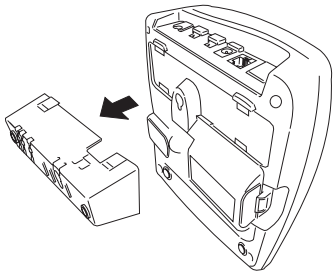

3) Rotate the mounting adapter 180° and snap it into place at the bottom of the base.

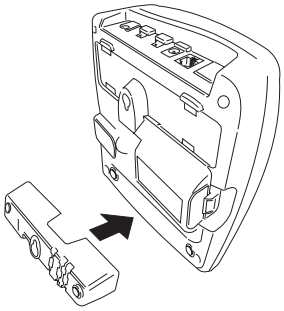

4) Plug the AC adapter cord into the 9 VDC input jack on the back of the base.

5) Put the AC adapter cord inside the molded wiring channel, then wrap it around the strain relief notch. Plug the AC adapter into a standard 120 VAC wall outlet.

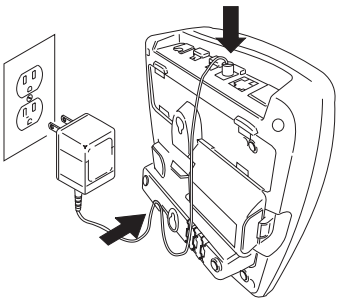

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:40:02 1998

Color profile: Disabled
Composite Default screen

6) Plug one end of the long telephone cord into the **TEL LINE** jack on the back of the base, then plug the other end into a standard telephone jack.

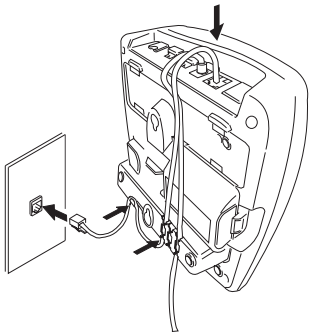

7) Line up the mounting slots on the base with the mounting screws on the wall, then push in and down until the phone is firmly seated.

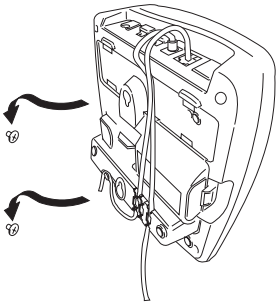

8) On the base unit, pull the handset retainer out of the slot and rotate it clockwise 180°.

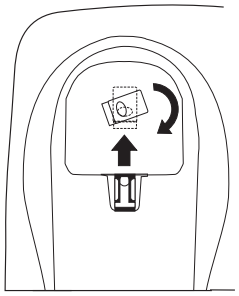

9) Flip the retainer from front to back, then slide it into the slot so that the lip of the retainer faces up and the oval is at the bottom of the retainer. This will hold the handset in place.

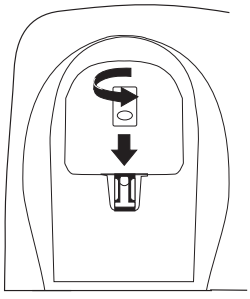

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:40:05 1998

Color profile: Disabled
Composite Default screen

INSTALLING THE HANDSET BATTERY PACK

Use only Uniden battery model (BT-990) supplied with your phone.

1) Press in on the battery cover release and slide the cover down until it comes off.

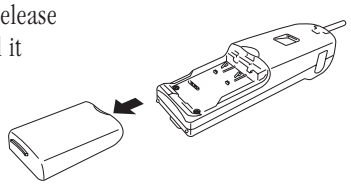

2) Install the nickel-cadmium battery with the label facing down.

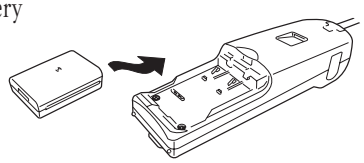

3) Slide the battery cover on until it snaps into place.

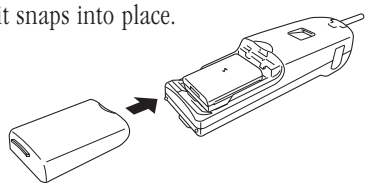

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:40:08 1998

Color profile: Disabled
Composite Default screen

CHARGING THE BATTERY PACK

▼ *Initial battery charging*

Before plugging the phone line into your new phone for the first time, fully charge the battery pack for 15-20 hours *without interruption.*

1) Place the handset on the base.

2) Make sure that ***status*** LED lights. If the LED doesn't light, check to see that the AC adapter is plugged in and that the handset makes good contact with the base charging contacts.

▼ *Charging optional battery packs*

The base unit of your phone is equipped with a compartment for charging an extra battery pack for use in your handset. **You can obtain an extra battery pack from your authorized Uniden dealer**.

NOTE

Please visit your authorized Uniden dealer to obtain an extra battery pack or contact the Uniden parts department at (800)554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday.

1) Position the battery pack so the inner side contacts are facing up.

2) Slide the battery pack into the charging compartment until it clicks into place.

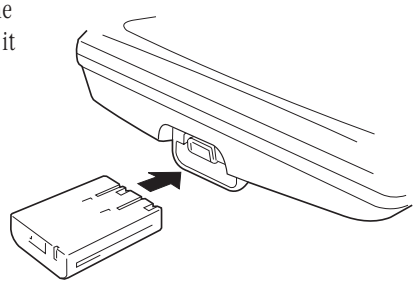

3) Charge the battery for 24 hours. When charging is complete, pull up on the latch to remove the battery pack. To install the charged battery into the handset, refer to "Installing the Handset Battery Pack," page 9.

In the event of a power failure, your spare battery pack can be used as a back-up power supply for the base unit.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:23:25 1998

Color profile: Disabled
Composite Default screen

▼ *Low battery indicator*

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is not in use, `Low Battery` flashes. If the phone is in use, `Low Battery` flashes and the handset beeps. Complete your conversation as quickly as possible and return the handset to the base for charging.

```
Low Battery
```

CLEANING THE BATTERY CONTACTS

To maintain a good charge, clean all charging contacts on the handset and base about once a month with a pencil eraser or other contact cleaner. DO NOT use liquids or solvents; you may damage your phone.

SETTING THE PULSE/TONE SWITCH

Be sure the ***PULSE/TONE*** switch is in the ***TONE*** position unless your local phone system uses pulse dialing.

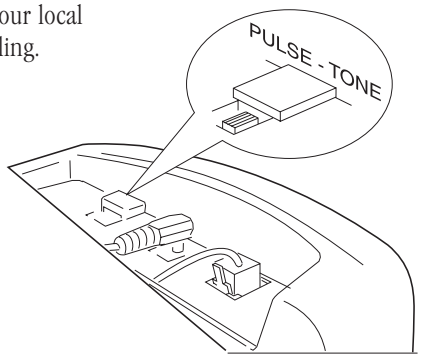

TIP

Most phone systems use tone dialing. Check with your local phone company if you're not sure whether your system is tone or pulse.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:23:26 1998

Color profile: Disabled
Composite Default screen

ADJUSTING THE HANDSET VOLUME CONTROLS

▼ *Handset ringer volume*

When the phone is in standby mode, pressing the ***vol*** ▲ or ▼ key on the handset selects the handset ringer volume. There are two ringer volume settings; high and low.

To select the high volume setting, press ***vol*** ▲. The handset displays `Ringer High`.

Ringer High

To select the low volume setting, press ***vol*** ▼. The handset displays `Ringer Low`.

Ringer Low

▼ *Handset earpiece volume*

There are three volume settings for the handset earpiece; high, normal, and low. The handset earpiece volume can only be adjusted during a call.

To lower the volume, press ***vol*** ▼, and to raise the volume, press ***vol*** ▲. The handset will display `Volume High`, `Volume Normal`, or `Volume Low`, indicating the current volume setting.

The volume returns to normal after you hang up.

▼ *Base unit ringer off-on*

To turn the base ringer on, select the ***RINGER ON*** position. To turn the base ringer off, select the ***RINGER OFF*** position.

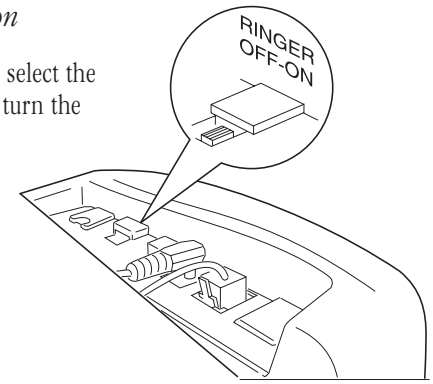

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:23:27 1998

Color profile: Disabled
Composite Default screen

INSTALLING THE BELTCLIP

▼ *To attach the beltclip*

1) Remove the slot cover.

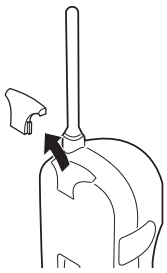

2) Inset the beltclip into the empty slot and press down until it clicks.

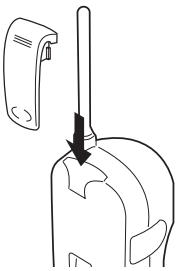

▼ *To remove the beltclip*

1) Pull back on the release tab and pull the beltclip up.

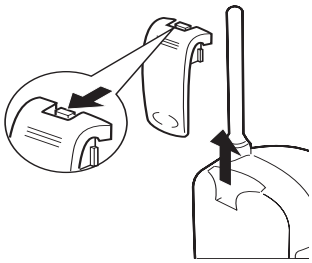

2) Replace the slot cover. You can store either the beltclip or slot cover on the bottom of the base.

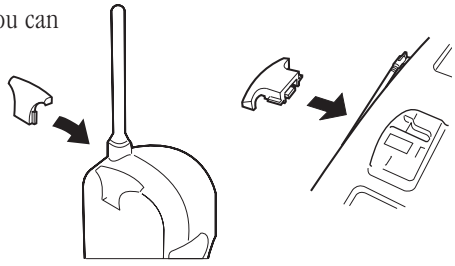

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:23:29 1998

Color profile: Disabled
Composite Default screen

HEADSET INSTALLATION

Your phone may be used with an optional headset, the Uniden HS 910. To use this feature, simply plug the headset plug into the headset jack. Your headset is ready for hands-free conversations.

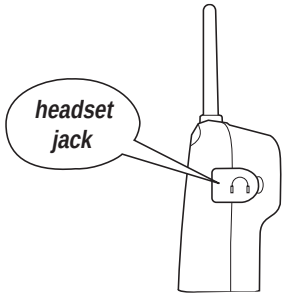

IMPORTANT

Use only the Uniden HS910 headset specifically designed for Spread Spectrum technology.

IMPORTANT

Keep headset wires away from base antenna.

NOTE

If you are using the optional headset, you must still use the handset keypad for phone operations.

AUTOMATIC DIGITAL CODE SECURITY

To prevent other parties from making unauthorized calls on your phone line, a digital code was added to the EXS9800. Your phone's handset and base share this code, which is randomly set each time you place the handset in the charging cradle. If the phone experiences a power failure, you must reset the digital security code.

▼ *To reset the digital security code*

1) Restore power to the base

2) Place the handset on the base. The ***status*** LED blinks to indicate that the digital security code is reset.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:23:29 1998

Color profile: Disabled
Composite Default screen

MAKING AND RECEIVING CALLS

	Handset On Base 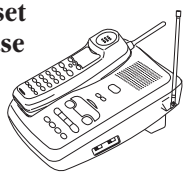	**Handset Off Base** 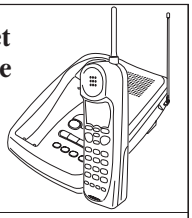
To answer a call	1) Pick up the handset. 2) If not in Autotalk Mode, press ***talk***.	Press any button.
To make a call	1) Pick up the handset. 2) Press ***talk***. 3) Listen for the dial tone. 4) Dial the number.	1) Press ***talk***. 2) Listen for dial the tone. 3) Dial the number.
To hang up	Press ***talk***, or return the handset to the base (AutoStandby).	
To redial	1) Pick up the handset. 2) Press ***talk***. 3) Listen for the dial tone. 4) Press ***redial***.	1) Press ***talk***. 2) Listen for the dial tone. 3) Press ***redial***.

FLASH AND CALL WAITING

If you have "call waiting" service and a call waiting tone sounds while you are on a call, press ***flash*** to accept the waiting call. There is a short pause, then you will hear the new caller. To return to the original caller, press flash again.

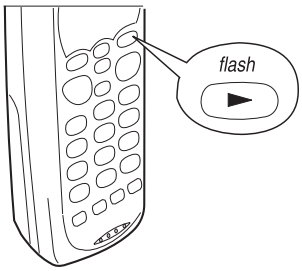

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:23:32 1998

Color profile: Disabled
Composite Default screen

STORING A PHONE NUMBER IN MEMORY

1) Remove the handset from the base.

2) Press and hold ***memory*** for two seconds. The following screen appears.

```
Memory Store
1►
2
```

3) Use the ▲ and ▼ keys or number keypad to scroll to the memory location where you would like to enter a number.

4) Press ***select***. The following screen appears, and a cursor flashes indicating that the display is ready for the name to be entered.

```
Store Name
▮
```

5) Use the ▲ and ▼ keys to scroll through the character menu. Use the ◄ and ► keys to move the cursor to the desired location, and enter the name.

6) Press ***select***. The following screen appears, and a cursor flashes indicating that the display is ready for the number to be entered

```
Store Number
▮
```

7) Enter the phone number with the number keypad (direct entry) or the ▲ and ▼ keys. Use the ▲ and ▼ keys to enter symbols, such as parenthesis and dashes. Use the ◄ and ► keys to move the cursor to the desired location, and enter the number.

*When entering numbers, press **pause** to enter a pause in the dialing sequence. The display shows a P. The pause feature is useful for long distance calling, credit card dialing, or sequences requiring a pause between digits.*

8) Press ***select.*** The handset beeps and displays a confirmation screen. For example, if you store a name and number into memory location number one, the display shows `Memory 1 Stored`.

```
Memory 1 Stored
```

9) Press memory to exit store mode. Or, wait 20 seconds for the phone to return to standby.

NOTE

Whenever you are using a menu screen, you must press a key within 20 seconds or the phone will return to standby. You may also press ***memory*** to exit a memory menu at any time.

HINT

The character menu consists of letters, symbols, and numbers.

HINT

The "–" does nothing to the dialing sequence. It simply allows you to display a dash.

NOTE

The pause button counts as one digit. Pressing ***pause*** more than once increases the length of pause between numbers.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:24:12 1998

Color profile: Disabled
Composite Default screen

EDITING A PHONE NUMBER IN MEMORY

Follow these steps to edit a phone number that you have already programmed into memory.

1) Remove the handset from the base.

2) Press and hold ***memory*** for two seconds. The display shows the Memory Store screen and any saved numbers.

```
  Memory Store
1► JOHN SMITH
2  UNIDEN
```

3) Use the ▲ and ▼ keys or number keypad to select the memory location you would like to edit. The ◄ and ► keys toggle between the names display and the numbers display.

4) Press ***select***. The following screen appears with the memory location number that you have selected in the display.

```
►Edit Memory 1
 Delete Memory 1
 Go Back
```

NOTE

If you select Go Back at any time, no changes are made and the handset shows the Memory Store screen.

NOTE

You may move the ► cursor down to Go Back *and press* ***select*** *if you would like to exit this menu.*

5) With ► cursor next to Edit Memory, press ***select***. The following screen appears, and a cursor flashes indicating that the display is ready for the name to be edited.

```
   Store Name
JOHN SMITH
```

6) Use the ▲ and ▼ keys to scroll through the character menu. Use the ◄ and ► keys to move the cursor to the desired location, and enter the name.

7) Press ***select***. The following screen appears, and a cursor flashes indicating that the display is ready for the number to be edited.

```
  Store Number
817 555-1212
```

NOTE

The "–" does nothing to the dialing sequence. It simply allows you to display a dash.

8) Enter the phone number with the number keypad (direct entry) or the ▲ and ▼ keys. Use the ▲ and ▼ keys to enter symbols, such as parenthesis and dashes. Use the ◄ and ► keys to move the cursor to the desired location, and enter the number.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:24:13 1998

Color profile: Disabled
Composite Default screen

8) Press ***select.*** The handset beeps and displays a confirmation screen. For example, if you store a name and number into memory location number one, then the handset shows `Memory 1 Stored`.



9) The display then returns to the Memory Store screen. You may select another number to edit (return to step 3) or you may press ***memory*** to return to standby.

ERASING A NUMBER FROM MEMORY

Use these steps to erase a programmed number from memory. Once a number is erased, that memory location may be programmed with a new number.

1) Remove the handset from the base.

2) Press and hold ***memory*** for two seconds. The handset shows the Memory Store screen with any saved numbers displayed.



3) Use the ▲ and ▼ keys to select the memory location you would like to delete. The ◄ and ► keys toggle between the names display and the numbers display.

4) Press ***select***. The following screen appears with the memory location number that you have selected in the display.



5) Use the ▼ key to move the ► cursor down to the `Delete Memory` command.



6) Press ***select***. The following confirmation screen appears.



7) Use the ▼ key to move the ► cursor down to the `Yes` command.

8) Press ***select.*** The following confirmation screen appears.

NOTE

If you select `Go Back` at any time, no changes are made and the handset shows the Memory Store screen.

NOTE

If you select `No`, no changes are made and the handset shows the Memory Store screen.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:24:14 1998

Color profile: Disabled
Composite Default screen

9) Use the ▼ key to move the ► cursor down to the Yes command.

10) There is confirmation tone, and the handset displays Memory 1 Deleted.

```
Memory 1 Deleted
```

11) The display then returns to the Memory Store screen. You may select another number to delete (return to step 3) or you may press ***memory*** to return to standby.

HINT

Use the ◄ and ► keys to toggle between the names and numbers displayed in memory.

USING MEMORY DIALING

Follow the steps below to dial a number using a programmed memory location.

1) Press ***memory***. The handset displays your programmed memory locations.

```
1►John Smith
2 Uniden
3 Grandma
```

2) Use the ▲ and ▼ keys or the number keypad to select the memory location you would like to dial.

```
1 John Smith
2►Uniden
3 Grandma
```

3) Press ***talk*** and the number dials.

TRAVELING OUT-OF-RANGE

As you begin to move too far from your base unit, you will first hear a clicking sound. As you travel further out-of-range, the voice transmission will begin to break up. If you pass the range limits of the base unit, your call will terminate.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 11:28:07 1998

Color profile: Disabled
Composite Default screen

USING CALLER ID

You must subscribe to Caller ID from your phone company in order to use this feature.

▼ *Setting up Caller ID options*

There are three Caller ID setup options available; they are Autotalk, CIDCW, and Area Code.

AutoTalk allows you to answer the phone without pressing the ***talk*** button. If the phone rings when Autotalk is on, simply remove the handset from the cradle and the phone automatically answers the call. If the phone rings when Autotalk is off, you must press ***talk*** to answer the call. This option is useful to help you screen your calls more effectively.

CIDCW performs the same as regular Caller ID on a call waiting number. **You must subscribe to CIDCW from your phone company in order to use this feature**.

The **Area Code** feature is used when storing or directly calling numbers from Caller ID memory. All numbers with this area code are dialed directly without the area code. If you will be programming numbers within your area code that require all ten digits to be dialed, it is recommended that you do not program this feature.

To change your Caller ID options:

1) Press ***setup***. The following screen appears.

```
1▸Auto Talk:Off
2 CIDCW    :On
3 Area Code:
```

2) Use the ▲ and ▼ keys to move the cursor the selection that you would like to change. Press the ***select*** key to toggle between `On` and `Off` for `Autotalk` and `CIDCW`. Press ***select*** and use the number keypad to enter or change the area code, then press ***select*** again.

3) After you have made your selections, press ***setup*** and return the handset to the charging cradle. The status LED flashes, indicating that your setup changes are now effective.

NOTE

You must subscribe to CIDCW from your phone company in order to use this feature.

HINT

You may use the ◄ and ► keys to toggle between numbers when programming the area code.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:24:47 1998

Color profile: Disabled
Composite Default screen

▼ *Screening your calls*

Caller ID allows you to screen your calls. After the first ring, the display shows the date, time, number, name, and phone number of the caller. If your Caller ID service is number only, then the name does not appear on the second line.

```
12/21 12:30P
Smith John
817-555-1212
```

If a name or number is not available, the display will show a message such as `Line Error`, `Private Number`, `Private Name`, etc.

▼ *Reviewing Caller ID messages*

To review your Caller ID messages, follow the steps below.

1) Press ***call id***, and the Caller ID summary screen appears. The screen shows the number of new messages and total messages.

```
  New : 01
Total : 02
```

2) Press ▼ to scan through the messages. The most recent message appears first, with the date, time, call count, name, and phone number. Press ▲ to scan backwards through the list.

```
12/21 12:30P 03
Smith John
817-555-1212
```

3) Once you have reviewed your oldest message, the following screen appears. Press ***call id*** to return to standby.

```
End
```

NOTE

If you have no New Caller ID Messages, then the "New" display is blank. Only the "Total" display appears.

NOTE

Once a Caller ID message has been viewed, it is no longer considered a new message.

NOTE

If you have no Caller ID messages, then the total is shown as `00`.

NOTE

Once you have viewed all of your Caller ID messages and reach the "End" display, the message list does not cycle back to the beginning. You must press ▲ to view your previous messages.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:24:48 1998

Color profile: Disabled
Composite Default screen

▼ *Calling a Caller ID number*

1) Press ***call id***, and the Caller ID summary screen appears. The screen shows the number of new messages and total messages.



2) Select the number that you would like to dial. Press ▼ to scan forward through the messages and ▲ to scan backwards through the list.



3) Press ***talk*** and the number automatically dials.

▼ *Storing a Caller ID number into a memory location*

1) Press ***call id***, and the Caller ID summary screen appears. The screen shows the number of new messages and total messages.



2) Press ▼ or ▲ to find the message that you would like to store, then press ***memory*** to store the selected message.



3) The selected location screen appears. Use the ▲ and ▼ keys to select a blank memory location where you would like to store the number. (If you want to replace an existing number with the Caller ID number, skip to step 5.)



4) Press ***select***. A confirmation tone sounds, and the number is programmed. (Do not complete steps 5 and 6.)

5) If you choose to replace an existing number with the Caller ID number, press ***select,*** and the following screen appears.

6) Use the ▲ key to move the cursor to Yes and press ***select***. A confirmation tone sounds, and the number is programmed.

NOTE

If you select No, then the Caller ID screen returns.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 11:20:37 1998

Color profile: Disabled
Composite Default screen

▼ *Deleting a Caller ID message*

To delete a single Caller ID message, follow the steps below.

1) Press ***call id***, and the Caller ID summary screen appears. The screen shows the number of new messages and total messages.



2) Select the number that you would like to delete. Press ▼ to scan forward through the messages and ▲ to scan backwards through the list.



3) Press ***delete***, and the following screen appears.



4) Press ***select*** or ***delete***. A confirmation tone sounds and the Caller ID screen returns with the next message displayed.

5) After you have deleted all Caller ID messages, the display shows End. Press ***call id*** to return to standby.



▼ *Deleting all Caller ID messages*

To delete all of your Caller ID messages, follow the steps below.

1) Press ***call id***, and the Caller ID summary screen appears. The screen shows the number of new messages and total messages.



2) Press ***delete***, and the following screen appears.



3) Use the ▲ key to move the cursor to Yes, then press ***select***.

NOTE

If you select No, then the Caller ID screen returns.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:24:49 1998

Color profile: Disabled
Composite Default screen

4) A confirmation tone sounds, and the following screen appears.



5) Press ***call id*** to return to standby.

USING REDIAL

The ***redial*** key redials the last number dialed. The redialed number can be up to 32 digits long.

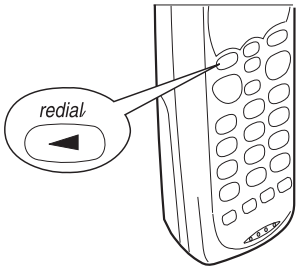

USING THE TONE FEATURE

If you are dialing in the pulse mode and need to enter tone digits, press ***tone*** to enter the digits. Once the call has ended, the tone mode is canceled and pulse dialing resumes.

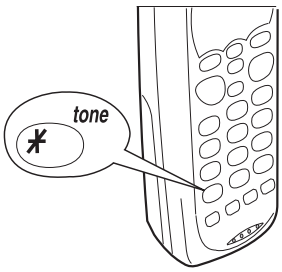

The tone feature only applies when the base unit is set to pulse.

The tone feature applies only when the base unit is set to pulse.

C:\Manuals 7\Exs9800\EXS9800.vp
Fri Oct 02 11:15:54 1998

Color profile: Disabled
Composite Default screen

USING THE PAGE/INTERCOM FEATURE

To locate the handset (while it's off the base), press ***page/int'com*** on the base.

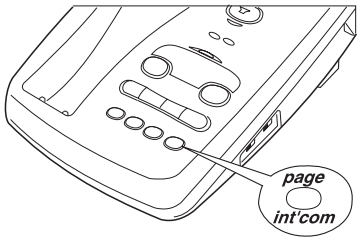

The handset beeps and displays Paging.



Press ***talk*** on the handset to end paging. Press ***talk*** again to return to standby.

To use the intercom, press ***talk*** while the handset is being paged. This allows the handset and base to work as an intercom.

You may also use the intercom by pressing ***int'com*** on the handset. The base unit will ring, and the base user must press ***page/int'com*** or ***speaker*** to answer the intercom page. Pressing ***int'com*** a second time will cancel the page.

USING THE SPEAKER PHONE

You may use the phone as a speaker phone to answer calls by pressing the ***speaker*** button on the base unit. When you hang up, press ***speaker*** again.

If the handset is on the base, you may use the handset keypad to dial a number or use memory dialing.

C:\Manuals 7\Exs9800\EXS9800.vp
Fri Oct 02 13:39:09 1998

Color profile: Disabled
Composite Default screen

THE INTEGRATED ANSWERING DEVICE

The EXS9800 has a built-in answering system that answers and records incoming calls. You can also use your answering system to record a conversation, leave a memo message for others who use the phone, or to announce a special message to callers when you're away from your phone.

FEATURES

- Digital Tapeless Recording
- 15 minutes of Recording Time
- Call Screening
- Selectable Outgoing Messages
- Time and Day Stamp
- Remote Access
- Toll Saver

Digital Tapeless Recording allows you to quickly review, save, or delete the messages you choose. You'll never have to worry about a tape wearing out, jamming, or resetting improperly.

The Integrated Answering System is easy and convenient to use, but ***please read*** through all of the instructions carefully before attempting to use it.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:25:43 1998

Color profile: Disabled
Composite Default screen

TURNING THE ANSWERING SYSTEM ON/OFF

1) To turn the answering system on, press ***answer***. A tone sounds and the current outgoing message plays on the base speaker. A second tone sounds after the outgoing message plays and the message counter LED turns on to indicate that the unit is ready to answer calls.

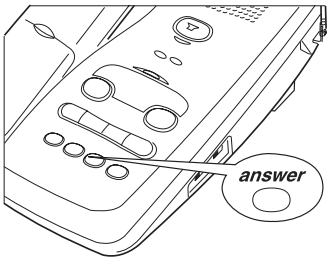

2) To turn the answering system off, press ***answer*** again. A tone sounds followed by the announcement "Answer off" and the message counter LED turns off.

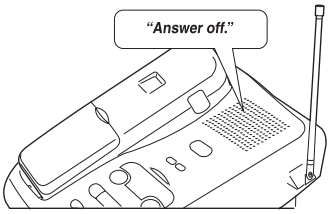

SETTING THE CLOCK

The clock on the EXS9800 Answering System starts when power is applied to the base. Follow these steps to set the clock to the correct time:

1) Press and hold ***clock*** until a beep sounds.

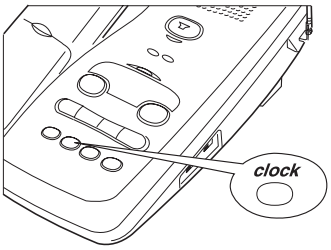

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:25:43 1998

Color profile: Disabled
Composite Default screen

HINT

skip/repeat refers to either the ***skip*** button or the ***repeat*** button.

2) Press ***skip/repeat*** until the correct day is announced. Numbers zero through six display on the base as each day is announced.

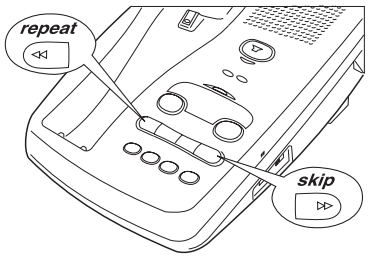

3) Press ***clock*** again to select the day. The hour setting is announced.

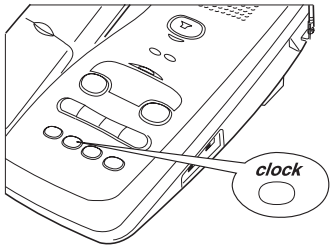

HINT

Press ***skip/repeat*** multiple times to scroll through days, hours, minutes, etc.

4) Press ***skip/repeat*** until you hear the current hour setting. Numbers 1 through 12 display on the base as each hour is announced.

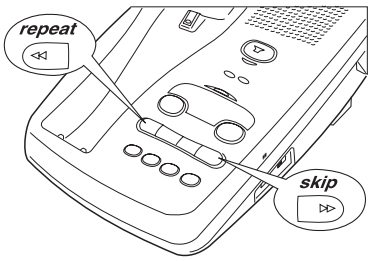

5) Press ***clock*** again to select the correct hour.

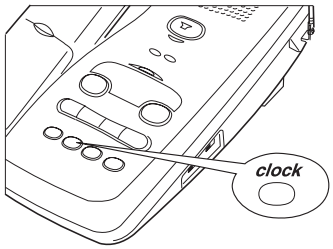

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:43:03 1998

Color profile: Disabled
Composite Default screen

6) Press ***skip/repeat*** until you hear the current minute setting. The numbers 0 through 59 display on the base as each minute is announced.

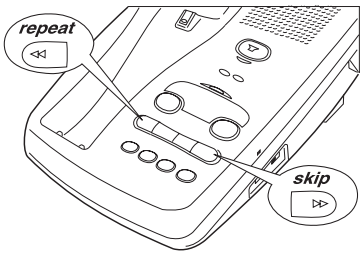

7) Press ***clock*** again to select the correct minute. The AM/PM setting is announced.

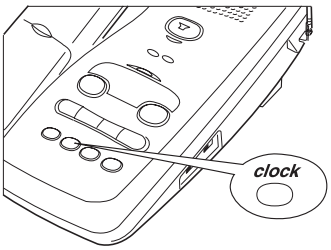

8) The LED displays an *A* or *P*. Press ***skip/repeat*** until you hear the correct AM/PM setting.

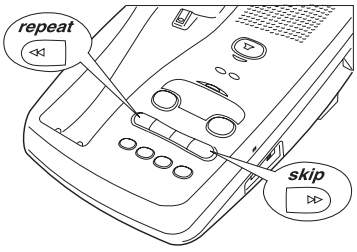

9) Press ***clock*** again to end the time/day setting. The EXS9800 announces the correct time.

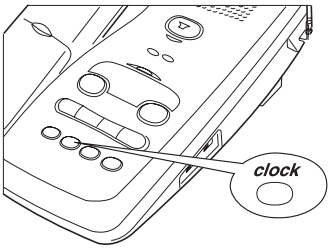

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:25:45 1998

Color profile: Disabled
Composite Default screen

SETTING YOUR OUTGOING MESSAGE (OGM)

When you receive a call, the answering system automatically plays either a preset message or your own personal outgoing message.

▼ *Preset message*

The following message is prerecorded at the factory:

"Hello, no one is available to take your call. Please leave a message after the tone."

To record your own OGM, follow the steps below.

▼ *Recording your personal OGM*

1) Press and hold ***ogm*** until you hear a long tone. Start recording your message after you hear the long tone **and** the message counter LED blinks.

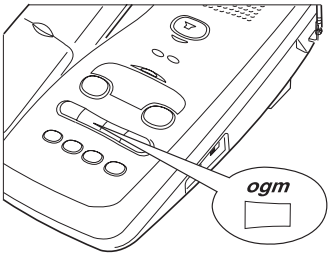

2) When you are finished recording your message, press ***ogm*** again. A tone sounds and your message plays back on the base speaker.

NOTE: To choose between the prerecorded outgoing message and your personal outgoing message, press ***ogm*** *during outgoing message playback. This switches between the two options.*

TIP

Stand approximately 12 inches in front of the microphone and speak clearly when recording your outgoing message.

NOTE

You can record up to a 30-second OGM.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 11:21:40 1998

Color profile: Disabled
Composite Default screen

▼ *Announce only feature*

The Announce Only feature plays a prerecorded outgoing message or your own personal outgoing message, but it will not allow the caller to leave a message.

Move the ***REC TIME*** switch to the ***ANN*** position. The message counter LED displays *A* when the system is on standby.

SELECTING THE MESSAGE TIME

You can set your answering system to record messages up to one or four minutes long.

One minute option: move the ***REC TIME*** switch to ***1***.

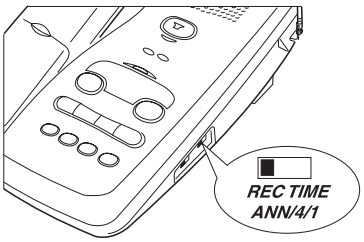

Four minute option: move the ***REC TIME*** switch to ***4***.

TIP

The memo function is completely independent of the outgoing message. It's handy for leaving other family members quick messages when you're unavailable.

MEMO

The Memo function allows the user to record a message on the base.

1) Press and hold ***memo***. A tone sounds and the message counter LED begins to blink.

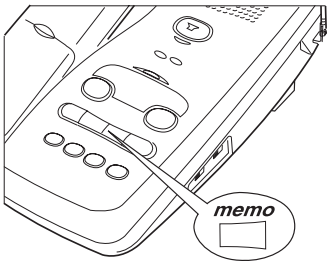

NOTE

A memo message is treated as a typical recorded message and will be added to the stored message.

2) Release ***memo*** and speak into the microphone.

3) When you have finished, press ***memo*** to stop recording. The system returns to standby.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:44:05 1998

Color profile: Disabled
Composite Default screen

SELECTING A PIN CODE

To play your messages from a remote location, you will need to enter a two-digit Personal Identification Number (PIN) code (00-99). To select a PIN, perform the following steps:

1) On the base, press and hold the ***pin*** button. A beep sounds, and the LED displays *00*.

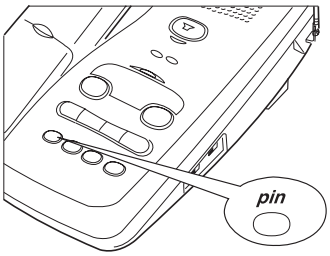

2) To set the first number, press ***skip/repeat*** to scroll from *0* to *9*. When the desired number appears in the display, press ***PIN***. This selects the first number.

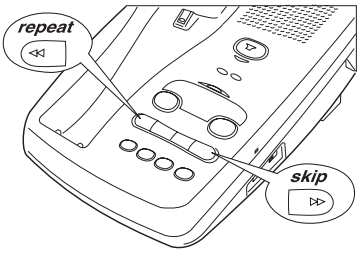

HINT

Press ***skip/repeat*** multiple times to scroll through numbers on the display.

3) To set the second number, press ***skip/repeat*** to scroll from *0* to *9*. When the desired number appears in the display, press ***pin.*** This selects the second number and the entered PIN is announced.

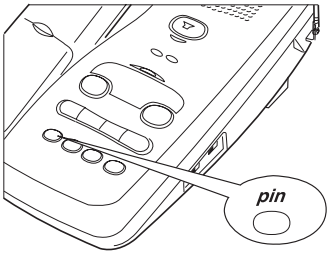

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:44:05 1998

Color profile: Disabled
Composite Default screen

SETTING THE TOLL SAVER SWITCH

The ring time/toll saver switch allows you to set the number of rings the caller hears before your answering system plays your outgoing message. You can set the switch to answer after two rings or after four rings. In the ***TS*** (Toll Saver) position, the answering system picks up after two rings if you have new messages, and after four rings if there are none. This way, if you call long distance to check your messages, you can hang up after the second ring to avoid billing charges.

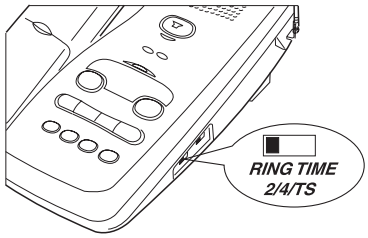

USING THE RESET BUTTON

The ***RESET*** button is used to initialize the base computer.

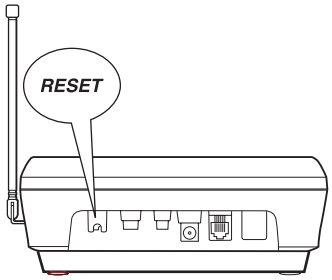

The reset button can be used if an AC power line disturbance causes the answering system to malfunction and become inoperative. Pressing ***RESET*** does NOT erase any data stored in your system memory.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:44:06 1998

Color profile: Disabled
Composite Default screen

PLAYING YOUR MESSAGES

HINT

To stop playing your messages at any time, press ***play/stop*** again.

The base LED shows the number of total messages on the display. If the display is blinking, then there are new messages waiting for you. The EXS9800 is designed to play your new messages first. After you play your new messages, you can then play your stored messages.

1) Press ***play/stop***. The system announces the number of new and old messages. The time and day each message was received is announced after the message is played, and the message counter LED displays the number of the current message.

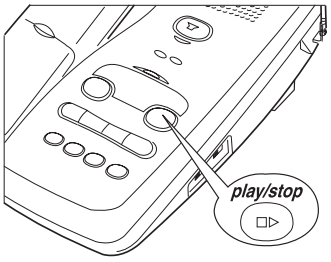

2) When all new messages have played, a long tone is heard. The message counter LED stops flashing to indicate that all of the new messages have been reviewed.

3) After you have reviewed your new messages, you can review your stored (old) messages. Press ***play/stop*** and follow the instructions above.

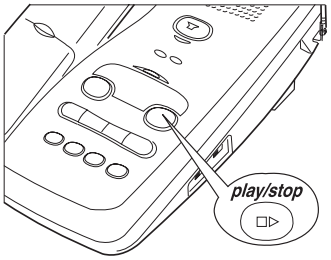

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:44:07 1998

Color profile: Disabled
Composite Default screen

REPEATING A MESSAGE

1) Press ***play/stop*** to review your messages. The number of stored messages is announced.

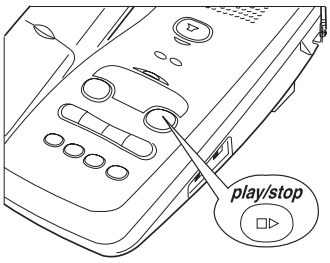

2) After a message has played for a few seconds, press ***repeat*** to replay the message.

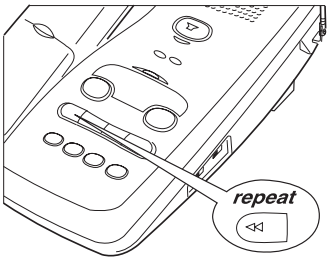

3) Press ***play/stop*** at any time to stop reviewing your messages and return to standby. The counter LED shows the total number of messages still on the system.

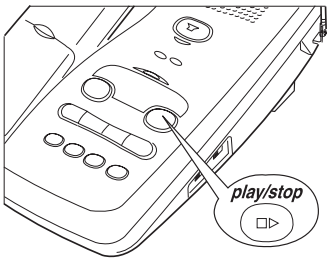

NOTE

Pressing ***repeat*** before 1-1/2 seconds of the message has played, causes the system to scan back one message.

TIP

If you have several messages, press ***repeat*** until you return to the message you want replayed.

C:\Manuals 7\Exs9800\EXS9800.vp
Fri Oct 02 13:01:06 1998

Color profile: Disabled
Composite Default screen

SKIPPING A MESSAGE

1) Press ***play/stop*** to review your messages. The number of messages is announced.

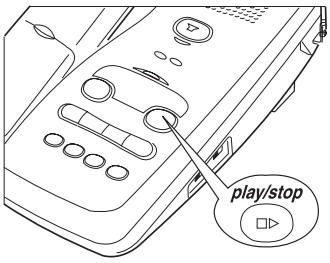

2) Press ***skip*** at anytime to skip to the next message.

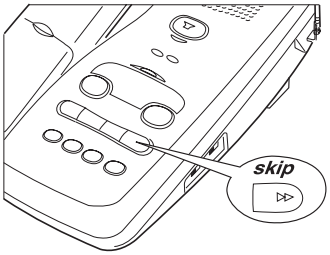

3) Press ***play/stop*** at any time to stop reviewing your messages and return to standby. The message counter LED shows the total number of messages still on the system.

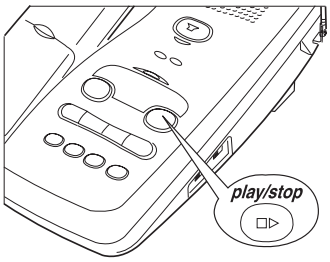

HINT

Each time ***skip*** is pressed, the system scans forward one message. If you have several messages, press ***skip*** to find the message you want to play.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:27:18 1998

Color profile: Disabled
Composite Default screen

DELETING A MESSAGE

1. Press ***play/stop*** to review your messages.

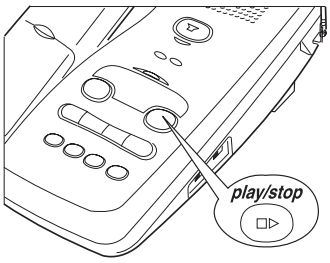

2. If you decide to delete a message, press ***delete*** until you hear a tone, anytime during the message. The system beeps and immediately goes to the next message.

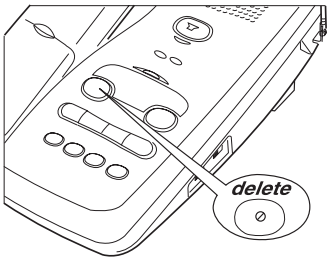

3. After you have played all of your messages, a long tone sounds on the base speaker.

To delete all messages, press and hold ***delete*** *after reviewing your messages. A tone sounds when all message are cleared.*

NOTE

When you press ***delete***, you are permanently deleting the message. Once deleted, the message cannot be replayed.

NOTE

The system automatically returns to standby when all messages have played.

RECORDING A CONVERSATION

You can record up to a 15 minute conversation while you are using your phone.

1) During a conversation, press ***memo***. The unit begins recording and two dashes show in the display. A beep that can be heard by both parties sounds every 15 seconds.

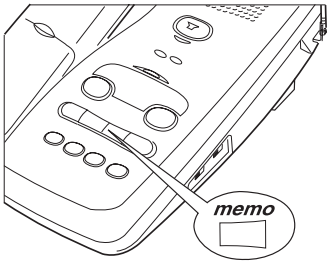

2) To stop recording, press ***memo*** again.

NOTE

A recorded conversation is treated as a typical message and will be added to the stored messages.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:27:19 1998

Color profile: Disabled
Composite Default screen

REMOTE ACCESS AWAY FROM HOME

You can operate your answering system from a remote location using any touch-tone telephone. Use this function to check for recorded messages, to play or delete messages, or even to record a new outgoing message.

1) Call your telephone number.

2) During the outgoing message playback, press # followed by your PIN number. Refer to page 32 for instructions on how to select a PIN code.

3) The answering system announces the time and day stamp followed by the number of messages stored in memory. Message playback automatically begins.

4) You may continue to listen to your messages, or you may select a command from the following chart:

FUNCTION	PRESS
Repeat	#, 1
Play	#, 2
Skip	#, 3
Delete	#, 4
Stop	#, 5
Answer On	#, 6
Memo Record/Stop	#, 7
OGM Record/Stop	#, 8
Answer Off	#, 9
Room Monitor	#, *

5) After all of your messages have played, you will hear intermittent beeps indicating that the system is in command waiting mode. You may enter another command at this time from the chart above.

6) When you are finished, hang up to exit the system. The answering system automatically returns to standby.

NOTE

You must enter a command within 15 seconds of entering command waiting mode or the answering system automatically hangs up and returns to standby.

NOTE

The system will only playback messages for four minutes and then it returns to command waiting mode. To continue playing your messages, press #2 again within 15 seconds.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 11:22:28 1998

Color profile: Disabled
Composite Default screen

QUICK REFERENCE CHART

If your phone is not performing to your expectations, please try these simple steps first.

PROBLEM	SUGGESTION
The charge light won't come on when the handset is placed in the base.	• Make sure the AC adapter is plugged into the base and wall outlet. • Make sure the handset is properly seated in base. • Make sure the charging contacts on the handset and base are clean.
The audio sounds weak and/or scratchy.	• Make sure that the base antenna is in a vertical position. • Move the handset and/or base to a different location away from metal objects or appliances and try again.
Can't make or receive calls.	• Check both ends of the base telephone line cord. • Make sure the AC adapter is plugged into the base and wall outlet. • Disconnect the AC adapter for a few minutes, then reconnect it. • Place the handset back on the charging cradle for a few seconds. The ***status*** LED will blink indicating that the phone has been reset.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:45:58 1998

Color profile: Disabled
Composite Default screen

PROBLEM	SUGGESTION
The handset doesn't ring or receive a page.	• The Nickel-Cadmium battery pack may be weak. Charge the battery on the base unit for 15-20 hours. • The handset may be too far away from the base unit. • Place the base unit away from appliances or metal objects. • Place the handset back on the charging cradle for a few seconds. The ***status*** LED will blink indicating that the phone has been reset.
The answering system does not work.	• Make sure the base unit is plugged in. • Make sure the answering system is turned on. • Press ***RESET*** after an AC line spike.
The answering system does not answer calls.	• Set the ***REC TIME*** switch to either the one minute or four minute option. • The memory may be full. Delete some or all of the saved messages.
Messages are incomplete.	• The incoming messages may be too long. Remind callers to leave a brief message, or set the ***REC TIME*** switch to the four minute option. • The memory may be full. Delete some or all of the saved messages.
After a power failure, the outgoing message is deleted.	• Record your personal outgoing message again. The default messages should remain.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:45:58 1998

Color profile: Disabled
Composite Default screen

PROBLEM	SUGGESTION
No sound on the base unit speaker during call monitoring or message playback.	• Adjust the speaker volume on the base unit.
Cannot access remote call-in features from another touch-tone phone.	• Make sure you're using the correct PIN number. • Make sure that the touch-tone phone you're using can transmit the tone for at least two seconds. If it cannot, you may have to use another phone to access your messages.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:45:59 1998

Color profile: Disabled
Composite Default screen

SPECIFICATIONS OF YOUR NEW PHONE

GENERAL

The EXS9800 complies with FCC Parts 15 and 68.

Frequency control: PLL

Modulation: Direct Sequence Spread Spectrum; DBPSK

Operating temperature: 0º to +50º C (+32º F to +122º F)

BASE

Frequency: 904.2 to 925.8 MHz (20 channels)

Power requirements: 10V 500 mA (from AC adapter)

Size: 7-3/8in.(W) x 3-1/2in. (D) x 8-3/4in. (H)

Weight: Approx. 110.9 oz. (including optional battery)

HANDSET

Frequency: 904.2 to 925.8 MHz (20 channels)

Power requirements: Rechargeable Nickel-Cadmium battery pack

Size (without antenna): 2-1/4in. (W) x 3-1/2in. (D) x 7-1/4 in. (H)

Weight: Approx. 9.2 oz. (including battery)

Battery: BT-990

Capacity	600 mAH, 3.6V
Talk mode	4 hours
Standby mode	7 days

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

C:\Manuals 7\Exs9800\EXS9800.vp
Thu Oct 01 08:45:59 1998

CONTROLS AND FUNCTIONS

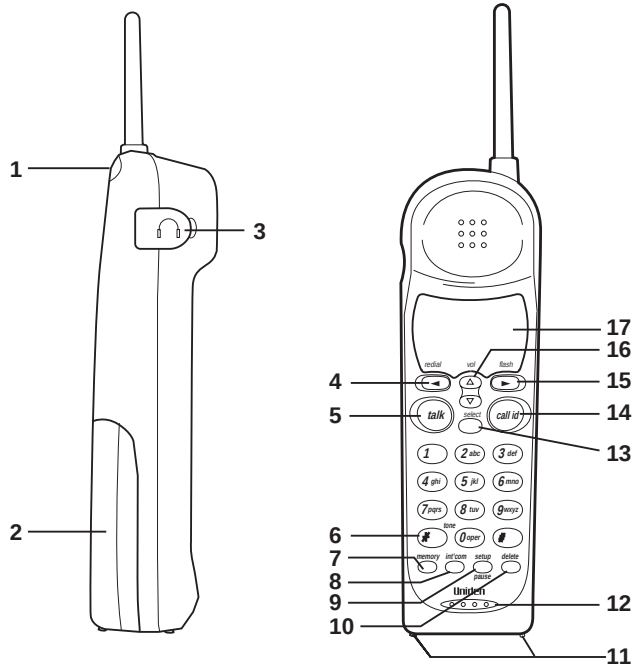

1. Slot Cover
2. Battery Compartment
3. Headset Jack
4. Redial
5. Talk
6. Tone
7. Memory
8. Int'com
9. Setup/Pause
10. Delete
11. Charging Contacts
12. Handset Microphone
13. Select
14. Call ID
15. Flash
16. Volume Up and Down
17. Handset Display
18. Handset Retainer Clip
19. Charging Contacts
20. Set PIN
21. Set Clock
22. Answer On/Off
23. Page/Int'com
24. Repeat
25. OGM
26. Memo
27. Skip
28. Delete
29. Play/Stop
30. LED Display
31. Status LED
32. Volume Up and Down
33. Speaker LED
34. Speaker Button
35. Speaker
36. Ring Time
37. Rec Time
38. Beltclip Holder
39. Microphone
40. Spare Battery Compartment
41. Reset
42. Base Ringer Off-On
43. Pulse/Tone
44. DC in 9V
45. Tel Line